



**WJL-6000
HALOGEN LEAK DETECTOR**

CUSTOMER MANUAL




General Information:

Incorporated with advanced leak detect technology, **WJL-6000** is our new product with the functions of easy operation, stable function and small appearance, it's an ideal and economic halogen leak detector.

Features:

- ◆ Detect all kinds of halogen refrigerants.
- ◆ Sensitivity adjusted at any time and it can be adjusted automatically to the best state of detecting.
- ◆ Inner precise IC with Ultra-Low consume circuit design, more stable, longer battery time.
- ◆ Two-color visual display of battery voltage.
- ◆ Excellent sensor, high sensitivity, longer use time.

Structure:

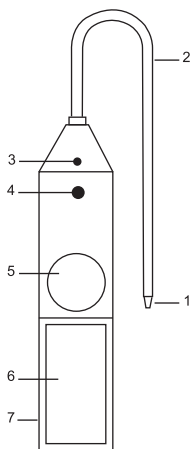

1. Sensing tip
2. Flexible probe
3. Indicator light
4. Buzzer
5. Power on/off and sensitivity adjusting faucet
6. Battery compartment
7. Shell

Battery Voltage Indication:

The forepart light of panel indicates the leak and the battery voltage.

Green- Battery voltage is normal, sufficient for proper operation.

Orange- Battery voltage is approaching the lower threshold for operation, replace as soon as possible.

Reset Feature/Automatic Circuit:

WJL-6000 features on automatic circuit and a reset function that set the unit to ignore ambient concentrations of Halogen.

- ◆ Reset: Upon initial power on, the unit automatically sets itself to ignore the level of refrigerant present at the tip in 6's and enter into the best state of detecting. If place the sensing tip near a known leak and switch the unit on, it's convenient to find higher concentration leak. Or move to fresh air and switch on, adjust to maximum sensitivity, any concentration above zero will be detected.
- ◆ Automatic-circuit: When in the measuring state, automatic circuit will follow the changing concentration of halogen gas in environment to avoid false alarm.

Adjustment of sensitivity:

The unit features vari-speed sensitivity adjustment and can be adjusted during the course of detecting. Clockwise adjusting means high sensitivity and in reverse means low.

It does not mean, when to select, the higher sensitivity is adjusted, the better the unit will work, because if the air is not fresh, selecting higher sensitivity will cause an improper alarm.

Leak alarm:

When the leaked gas is detected, the audible tone will change to a "siren" type sound. More refrigerant, more siren. At the same time, Indicator light is flashing quickly.

Operating Instructions:

- ◆ Switch the unit on and discontinuous buzzer will be heard.
- ◆ Verify the battery voltage level by observing the power indicator.
- ◆ Adjust appropriate sensitivity, or adjust the sensitivity at any time during operation. This adjustment will not interrupt detection.
- ◆ To detect 6's later after the unit is switched on.
- ◆ When refrigerant is detected, the buzzer will change to a "siren" type sound.
- ◆ Verify the place of siren and detect continuously until the leak is confirmed.

Operating tips:

- ◆ Adjust to the higher sensitivity, when a leak can't be found. Adjust to the lower sensitivity when unstable.
- ◆ When the buzzer alarms for leak, if the sensing tip remained at the part being detected long enough, the circuit will equalize it.
- ◆ In windy areas, even a large leak is difficult to be found. Under this condition it is better to shield the potential leak area.
- ◆ Be aware that the detector may alarm if the sensing tip contacts with moisture and/or solvents. Therefore, avoid contact with these when leak checking.

Recommended Procedure:

Note: On Automotive A/C Systems leak test with the engine not in operation.

- ◆ The air conditioning or refrigeration system should be charged with sufficient refrigerant to have a gauge, pressure of at least 340 kpa (50 psi) when not in operation. At temperatures below 15°C (59°F), leaks may not be measurable, since this pressure may not be reached.
- ◆ Take care not to contaminate the detector probe tip if the part being tested is contaminated. If the part is particularly dirty, or condensate (moisture) is present, it should be wiped off with a dry shop towel or blown off with shop air. No cleaners or solvents should be used, since the detector may be sensitive to their ingredients.

- ◆ Visually trace the entire refrigerant system, and look for signs of air conditioning lubricant leakage, damage, and corrosion on all lines. Hose, and components. Each questionable area should be carefully checked with the detector probe, as well as all fittings, hose to line couplings, refrigerant controls, service ports with caps in place, brazed or welded areas, and areas around attachment points and hold-downs on lines and components.
- ◆ Always follow the refrigerant system around in a continuous path so that no areas of potential leaks are missed. If a leak is found, always continue to test the remainder of the system.
- ◆ At each area checked, the probe should be moved around the location, at a rate no more than 25 to 50 mm/second (1-2 in/second). And no more than 5mm (1/4 in) from the surface, completely around the position. Slower and closer movement of the probe greatly improves the likelihood of finding a leak.
- ◆ An apparent leak shall be verified at least once as follows:
 - a) Blow shop air into the area of the suspected leak, if necessary, and repeat the check of the area. In case of very large leaks, blowing out the area with shop air often helps locate the exact position of the leak.
 - b) First move the probe to fresh air and reset. Then hold the probe tip as close as possible to the indicated leak source and slowly move around it until the leak is confirmed.

Automotive A/C Systems only-

- ◆ Leak testing of the evaporator core while in the air conditioning module shall be accomplished by turning the air conditioning blower on high for a period of 15 seconds minimum, shutting it off, then waiting for the refrigerant to accumulate in the case of 10 minutes. After such time, insert the leak detector probe into the blower resistor block or condensate drain hole, if no water is present, or into the closet opening in the heating/ventilation/air conditioning case to the evaporator, such as the heater duct or vent duct. If the detector alarms, a leak apparently has been found.

All Systems:

- ◆ Following any service to the refrigerant systems and any other service which disturbs the refrigerant system, a leak test of the repair and of the service ports of the refrigerant system should be done.

Applications:

The **WJL-6000** may also be used to:

- ◆ Detect leaks in other systems and storage/recovery containers. It will respond to **All** halogenated (contains Chlorine and Fluorine) refrigerants. This includes, but is not limited to:
 - CFCs e.g.R12,R11,R500,R503 etc...
 - HCFCs e.g.R22,R123,R124,R502 etc...
 - HFCs e.g.R134a,R404a,R125 etc...
- Blends such as AZ-50. HP62. MP39 etc...
- ◆ Detect Ethylene Oxide gas leaks in hospital sterilizing equipment (it will detect the halogenated carrier gas).
- ◆ Detect SF-6 in high voltage circuit breakers.
- ◆ Detect most gases that contain chlorine, Fluorine and Bromine(halogen gases).
- ◆ Detect cleaning agents used in dry cleaning applications such as perchloroethylene.
- ◆ Detects halogen gases in fire-extinguishing system.

Maintenance:

Appropriate maintenance of your leak detector is very important. Carefully following the instructions to reduce the mal-operation and prolong the life expectancy of the unit

- ◆ Keep the sensing tip clean from the dust, moisture and grease.
- ◆ If the tip itself is dirty it can be cleaned by immersing in a mild solvent, such as alcohol, for several seconds, and then using compressed air and/or a towel to clean. Never use solvents such as gasoline, turpentine, minerals etc. for they will leave detectable residue and desensitize your unit.
Warning:turn the tool off before replacing the sensing tip. Failure to do so may result in a mild electric shock!
- ◆ Sensing tip replacement: the tip will eventually wear out and require replacement. It is difficult to predict exactly when this will occur since tip longevity is directly related to the conditions and frequency of use. The tip should be replaced whenever the alarm sounds or becomes erratic in a clean and pure environment.

- ◆ Take out the batteries in case of long time of no-use.
- ◆ If the tool does not work please inspect whether the batteries are in a stable connection or the voltage is below acceptable operating level. If not, please inspect whether the tip is dirty and in a stable connection with the probe.
- ◆ Your part of opening the tool is beyond the warranty service.

Specifications and parameter:

- ◆ Operating temperature: 0°C to 52°C (30°F to 125°F)
- ◆ Maximum sensitivity: 6 gr/yr, for all halogenated refrigerants.
- ◆ Battery life: Approximately 50 hours normal use.
- ◆ Response time: Instantaneous.
- ◆ Work mode: Continuous, no limitation.
- ◆ Fixed Probe Length: 20cm.
- ◆ Unit Dimensions: 22.9cm x 6.5cm x 6.5cm.
- ◆ Warm-up time: Approximately 6 seconds.
- ◆ Reset Time: Two to ten seconds.
- ◆ Power Supply: 6V DC four cell 7# excellent batteries.

Warranty:

- ◆ Should any problems arise in the operation within one year from the date of purchase, a no-charge repair or replacement will be offered to the original purchasers.
- ◆ The warranty applies to all repairable instruments that have not been tampered with or damaged through improper use.
- ◆ Make sure that you have reviewed the maintenance part of this manual to see if the problem can be solved before returning it for repair.



Elitech Technology, Inc.

1551 McCarthy Blvd Suite 112 Milpitas CA 95035
<http://www.elitechus.com>

Elitech (UK) LTD

2 Chandlers Mews, London, E14 8LA
<http://www.elitech.uk.com/>

ISO 9001:2015 ISO 14001:2015 OHSAS 18001:2007